



Installation Guide

G-Technology Inc. Tel: (310) 449-4599 Fax: (310) 449-4670 support@g-technology.com

TABLE OF CONTENTS

- 1. INTRODUCTION
- 2. SAFETY PRECAUTIONS
- 3. SYSTEM REQUIREMENTS
- 4. WHAT'S IN THE BOX
- 5. <u>G-RAID mini₂ OVERVIEW</u>
- 6. INSTALLING G-RAID mini₂
- 7. <u>G-RAID mini₂ LED OPERATION</u>
- 8. RAID LEVELS EXPLAINED
- 9. <u>G-RAID mini₂ CONFIGURATION</u>
- 10. RAID 1 MODE MAC OS X
- 11. FORMATTING G-RAID mini₂ MAC OS X
- 12. FORMATTING G-RAID mini₂ WINDOWS
- 13. RAID 1 MODE WINDOWS
- 14. CROSS-PLATFORM USE
- 15. TECHNICAL SUPPORT
- 16. LIMITED WARRANTY
- P/N GRM2 3-09 Rev A

IMPORTANT SAFEGUARDS



TO QUALIFIED SERVICE PERSONNEL

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating maintenance (servicing) instructions literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE APPLIANCE TO RAIN OR MOISTURE.

- READ INSTRUCTIONS All the safety and operating instructions should be read before the unit is operated.
- RETAIN INSTRUCTIONS The safety and operating instructions should be retained for future reference.
- HEED WARNINGS All Warnings on the unit and in the operating instructions should be adhered to.
- FOLLOW INSTRUCTIONS All operating and use instructions should be followed.
- ATTACHMENTS Do not use attachments not recommended by the unit's manufacturer as they may cause hazards.

 WATER AND MOISTURE Do not use this unit near water-for example, near a bathtub, washbowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.

 ACCESSORIES Do not place this unit on an unstable cart, stand, tripod, bracket or table. The unit may fall, causing serious injury and serious damage to the unit.

8. VENTILATION

Openings in the front and back of the unit are provided for ventilation to ensure reliable operation and to protect it from over heating. These openings must not be blocked or covered. This unit should never be placed near or over a radiator or heat source. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided.

- 9. POWER SOURCES
- This unit should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply in your facility, consult your local dealer or power company.

10. GROUNDING AND POLARIZATION

This equipment is supplied with a power cord with a US style 3-wire grounding type plug at one end and a 3-wire IEC standard connector at the other. The 3-wire grounding type plug will fit into a US style grounding type power outlet and the IEC connector is intended to plug into the Medéa unit. The 3-wire grounding type plug is a safety feature. If you are unable to insert the plug into the outlet, do not force it. Contact your EACTINE SAFETY PURPOSE OF THE GROUNDING TYPE PLUG. For use in Foreign Countries, contact your local Medéa dealer or representative to obtain a power cord with a locally compatible 3-wire ignunding plug on one end and a 3-wire IEC standard connector on the other.

- 11. POWER-CORD PROTECTION
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles and the point where they exit the unit.

12.SERVICING

Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltages or other hazards. (See Caution Symbol at rear of power supply chasis.) Refer all servicing to qualified service personnel.

13. LITHIUM BATTERY

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Dispose of used batteries according to the manufacturer's instructions.

WICHTIGE SICHERHEITSHINWEISE



Dieses Symbol soll den Benutzer darauf aufmerksam machen, dass er hier unisolierte gefährliche Spannung innerhalb des Gehäuses antrifft, die ausreichend gefährlich ist um einen Stromschlag hervorzurufen.

Dieses Symbol ist gedacht um den Anwender darauf hinzuweisen, dass sich im Handbuch wichtige Hinweise befinden.

WARNUNG: UM DIE GEFAHR EINES ELEKTRISCHEN SCHLAGES ZU VERRINGERN, DARF DAS GERÄT WEDER REGEN NOCH FEUCHTIGKEIT AUSGESETZT WERDEN.

4

1

1

- LESEN SIE DIE HINWEISE Lesen Sie bitte alle Sicherheitshinweise und die Bedienungsanleitung bevor Sie das Gerät in Betrieb nehmen.
- AUFBEWAHREN DER HINWEISE Bewahren Sie die Bedienungsanleitung und alle Sicherheitshinweise für spätere Verwendung auf.
 BEACHTEN SIE DIE WARNUNGEN
- Alle Warnungen and Hinweise auf dem Gehäuse und in der Anleitung sollten unter allen Umständen beachtet werden. 4. FOLGEN SIE DEN ANWEISUNGEN
- FOLGEN SIE DEN ANWEISUNGEN Alle Benutzer -und Bedienungsanweisungen sollten befolgt werden.
- ERWEITERUNGEN Benutzen Sie keine Erweiterungen, die nicht vom Hersteller empfohlen wurden um Gefahren zu vermeiden.



1

 WASSER UND FEUCHTIGKEIT Benutzen Sie das Gerät nicht in der Nähe von Wasser-z.B. Badewanne, Waschschüssel, Spüle, Waschwanne, feuchter Fußboden oder in der nähe eines Pools.

 ZUBEHÖR Stellen Sie das Gerät nicht auf einen wackeligen Rollcontainer, Ständer, Stativ, Regal oder Tisch. Das Gerät könnte henunterfallen, was einen bleibenden bzw. irreparablen Schaden an dem Gerät hervorrufen könnte.

8. BELÜFTUNG Öffnungen an der Vor- und Rückseite des Gerätes sind für die Belüftung vorgesehen eine zuverlässige Funktion zu garantieren gegen Überhitzung vorzubeugen. Diese Öffnungen dürfen weder verstellt noch zuggedeckt werden. Das Gerät sollte niemals in der Nähe einer Heizung oder einer anderen Wärmequelle aufgestellt werden. Das Gerät sollte außerdem nicht in einem Einbaugehäuse wie einem Schrank, oder einem Rack installiert werden, solange eine ausreichende Belüftung nicht sichengestellt ist.

 NETZANSCHLUB (STROMVERSORGUNG) Das Gerät sollte nur mit der Spannungsversorgung, die auf dem Geräteaufkleber ausgewiesen ist, betrieben werden. Sollten Sie nicht sicher sein, welche Art der Spannungsversorgung in Ihrem Betrieb ver wendet wird, fragen Sie bei Ihrem Händler oder der Stromversorgungsgesellschaft nach. 10. ERDUNG UND POLUNG Zur Ausstattung gehört ein Stromkabel mit einem amerikanischen Schutzkontakt Stecker mit Erdung auf der einen Seite und einem Kaltgeräte Stecker auf der anderen (IEC Standard). Der Schutzkontaktstecker passt in eine amerikanische Schutzkontaktsteckdose und de Kaltgerätestecker in ihr Medea Gerät. Der Schutzkontaktstecker ist eine Sicherheitseinrichtung. Sollten Sie ihn nicht ich Ihre Steckdose stecken können, wenden Sie keine Gewalt an. Setzen Sie sich mit Ihrem Elektriker in Verbindung um die Steckdose auszuwechseln. Zerstören Sie unter keinen Umständen die Sicherheitseinrichtung an Ihrem Stecker. Zur Anwendung in anderen Ländern setzen Sie sich mit Ihrem Medea Händler in Verbindung, der Ihnen ein Landesübliches Stromkabel mit einem Schutzkontaktstecker auf der einen und einem Kaltgerätestecker auf der anderen Seite zur Verfügung stellt.

11. STROMKABEL ISOLIERUNG Stromkabel sollien so gelegt werden, dass man nicht auf sie tritt, oder Geganstände auf ihnen stehen bzw. gegen sie stoßen. Besondere Aufmerksamkeit sollte Leitungen und Steckern, sowie Kupplungen und die Stelle an der sie das Gerät verlassen, gewidment werden.

12. SERVICE Versuchen Sie keinesfalls das Gerät selbständig zu warten, oder das Gehäuse zu öffnen. Dies kann Sie gefährlicher Spannung oder andem Gefahren aussetzen. Überlassen sie alle Wartungsarbeiten qualifiziertem Service Personal.



El equipo se entrega con un cable alimentador con un enchufe con puesta a tierra de 3 alambres en un Electrotécnico Internacional) de tres alambres en el otro. El enchufe con puesta a tierra de 3 alambres se conecta a un tomacorri ente con puesta a tierra y el conector IEC tiene por objeto enchufarse a una unidad Medea. El enchufe con puesta a tierra de 3 alambres es una medida de seguridad. Si no le es posible conectar el enchufe a un tomacorriente, no lo fuerce. Póngase en contacto con un electricista para sustituir el tomacorriente obsoleto. NO FRUSTRE LA MEDIDA DE SEGURIDAD INCORPORADA POR EL ENCHUFE CON PUESTA A TIERRA. Para uso en países extranjeros, póngase en contacto con su distribuidor local de Medea o su representante para obtener un cable alimentador con un enchufe con

- 11. PROTECCIÓN DEL CABLE ALIMENTADOR Los cables alimentadores se deberán de colocar de manera que se evite que sean pisados o pellizcados por algún equipo o mueble puestos encima de ellos o contra ellos, poniendo especial atención al enchufe del cable alimentador, receptáculos de protección o el
- No intente dar servicio a esta unidad por sí mismo en virtud de que abrir la unidad o retirar alguna cubierta lo puede exponer a voltaies peli grosos u otros riesgos. Permita que el servicio lo realice

sión si ácela lente

MISES EN GARDE IMPORTANTES

1



Le symbole d'éclair dans un triangle équilatéral indique la présence d'une tension suffisamment élevée pour engendrer un risque de chocs électriques.

Le point d'exclamation dans un triangle équilatéral indique que le manuel d'utilisation inclus avec l'appareil contient d'importantes recommandations quant au fonctionnement et à l'entretien de ce dernier.

MISE EN GARDE: AFIN DE PRÉVENIR TOUT RISQUE D'INCENDIE OU D'ÉLECTROCUTION, NE PAS EXPOSER L'APPAREIL À LA PLUIE NI À L'HUMIDITÉ.

- 1. LIRE LES DIRECTIVES Lire toutes les directives concernant la sécurité et le fonctionnement de l'appareil avant de l'utiliser
- 2. CONSERVER LES DIRECTIVES Conserver les directives concernant la sécurité et le fonctionnement de l'appareil pour référence ultérieure.
- 3 RESPECTER LES MISES EN GARDE Respecter toutes les mises en garde sur l'appareil et dans le manuel d'utilisation.
- 4. SUIVRE LES DIRECTIVES Suivre toutes les directives concernant le fonctionnement et l'utilisation de l'appareil.
- 5. ACCESSOIRES Ne pas utiliser d'accessoires non recommandés par le fabricant de l'appareil, car ils peuvent représenter un danger.
- EAU ET HUMIDITÉ
- Ne pas utiliser l'appareil dans un endroit où il risque d'être mouillé, notamment dans un sous-sol humide et à proximité d'une baignoire. d'un lavabo, d'un évier, d'une cuve à lessive ou d'une piscine
- 7. BAIES ET SUPPORTS Ne pas placer l'appareil dans une baie ou sur un support, un trépied, une console ou une table instable. L'appareil pourrait tomber et subir des dommages importants ou infliger de graves blessures.
- 8. AÉRATION

Le boîtier de l'appareil comporte des fente d'aération à l'avant et à l'arrière pour assu bon fonctionnement de l'appareil et le prot de la surchauffe. Ces fentes ne doivent pa obstruées ni recouvertes. Éloigner l'appare toute source de chaleur telle les radiateurs autres éléments de chauffage. Ne pas placer l'appareil dans un meuble encastré tel une bibliothèque ou un bâti qui ne procure pas une aération adéquate.

9. ALIMENTATION



Ne brancher l'appareil que dans une prise de courant du type décrit sur l'étiquette signalétique. En cas de doute sur le type

d'alimentation disponible, consulter la compagnie d'électricité ou le distributeur local.

- 10. MISE À LA TERRE ET POLARISATION Le cordon d'alimentation fourni avec l'appareil est doté d'une fiche polarisée à trois branch es de style américain à une extrémité et d'un connecteur femelle CEI standard à l'autre extrémité. La fiche polarisée à trois branches peut être branchée dans une prise de courant polarisée de style américain et le connecteur CEI doit être rac cordé à l'appareil Medea. La fiche polarisée à trois branches constitue une mesure de sécurité. Si elle ne s'insère pas aisément dans la prise, ne pas la forcer. Contacter un électricien pour remplacer la prise désuète. NE PAS TENTER DE CONTOURNER CETTE MESURE DE SÉCURITÉ. Pour utiliser l'appareil à l'étranger, se procurer un cordon d'alimentation compatible avec la configuration électrique locale auprès du distributeur ou du représentant Medea local.
- 11. PROTECTION DU CORDON D'ALIMENTATION Les cordons d'alimentation doivent être placés de manière qu'ils ne soient pas piétinés ou écrasés par des objets et une attention particulière doit être portée à la fiche, à la prise et au point de sortie de l'appareil.
- 12. RÉPARATION Ne pas tenter de réparer l'appareil, car l'ouverture ou le retrait du boîtier peut vous exposer à des tensions dangereuses ou à d'autres risques. Confier toute réparation à un technicien qualifié.

1. INTRODUCTION

Thank you for purchasing G-RAID \min_2^{TM} from G-Technology, Inc. (G-Tech)! G-RAID \min_2 is an ultra-portable, bus powered FireWire storage solution specifically designed to support professional content creation applications. G-RAID \min_2 features RAID 0 and fail-safe RAID 1 operation, a high-speed quad interface and two hard disk drives (HDD) or solid state drives (SSD).

2. SAFETY PRECAUTIONS

The G-RAID mini₂ disk array contains (2) 2.5" shock-resistant HDD or SSDs, however the system is susceptible to damage due to excessive physical shock. Place the unit in a vented area away from moisture or liquids. Please handle the unit with care. Do not open the case. Doing so will void the warranty. If the product is returned with damage caused by improper handling, the warranty will be void and liability will rest with the user.

3. SYSTEM REQUIREMENTS

eSATA/FireWire 800/USB 2.0 operation

- Mac OS X 10.3.x or higher
- Windows 2000 / XP



- FireWire 400 operation
- Mac OS 9.x or OS X
- Windows 2000 / XP

4. WHAT'S IN THE BOX

Take a moment to ensure that the following items are included in the box. If anything is missing, please call G-Tech at (310) 449-4599. Please keep the shipping container and packing materials. In the unlikely event that you need to return G-RAID mini₂ to us for any reason, you must use the G-Tech shipping container. If the product is returned damaged caused by improper packaging, the warranty will be void and liability will rest with the user.



Kit Contents:

- G-RAID mini₂ disk array w/ HDDs or SSDs
- eSATA cable
- FireWire 800 (9-pin to 9-pin) cable
- FireWire 400 (9-pin to 6-pin) cable
- USB 2.0 cable
- External universal power supply
- Product CD-ROM

5. G-RAID mini₂ OVERVIEW



NOTE: A 9-pin to 6-pin FireWire cable is shipped with G-RAID mini₂ to enable connection to FireWire 400 ports.

6. INSTALLING G-RAID mini₂

Connect G-RAID mini₂ to your computer using one of the included interface (eSATA, FireWire 400, FireWire 800 or USB) cables.

G-RAID mini₂ is bus-powered when connected via the FireWire port, eliminating the need to use the included AC power supply.

NOTE: To use the eSATA port with FireWire bus power, you must insert the eSATA cable **before** connecting the FireWire cable.



7. G-RAID mini₂ LED Operation

	Activity/Power LED	Drive Failure LED
System Boot up	Flashing	On
System Ready	On	Off
Disk Activity	Flashing	Off
Disk Drive Failure	On	On

NOTE: In the event of a disk drive failure, the Yellow Drive Failure LED located behind the front panel of G-RAID mini₂ will illuminate. If the unit was configured in fail-safe RAID 1 mode all the data stored on the system is intact. If configured in RAID 0 mode all data will be lost. Please contact G-Tech Technical Support if the Drive Failure LED illuminates for corrective action.

8. RAID Levels Explained

G-RAID $mini_2$ can be configured in RAID 0 (Performance) mode or RAID 1 (Fail-Safe) mode.

RAID Level	Storage Capacity	Protection Level	Ideal For:
0	100%	Low	Video editing
1	50%	High	Sensitive data

9. G-RAID mini₂ Configuration

Please refer to the table below for instructions on configuring G-RAID mini₂ RAID levels and preparing the unit for use with your operating system.

Mac OS X Installations

RAID Level	Notes
	Factory Setting. No action
RAID 0	necessary - G-RAID mini will
	mount right out of the box
	Proceed to Section 10 of this
RAIDI	manual.

Windows Installations

RAID Level	Notes
	Proceed to Section 12 of this
RAID 0	manual.
RAID 1	Proceed to Section 13 of this
	manual.

10. RAID 1 Mode - Mac OS X

A Mac utility is provided with G-RAID mini₂ to select the RAID mode. Follow the directions below to configure G-RAID mini₂ in fail-safe RAID 1 (mirroring) mode.

NOTE: G-RAID mini ships from the factory in RAID 0 mode.



WARNING: Changing the RAID level will erase any data stored on G-RAID mini.

1. Launch the G-Tech Configurator utility located on the CD that ships with the unit. The following window will appear.



2. Click on the <Continue> button. The following window will appear.



NOTE: The search process may take some time...

3. Once the utility finds your G-RAID mini₂, the following window will appear.

figuration Utility					
AID mini2/G-RAID3					
evel					
erformance)					
Select RAID level RAID 0 (Performance) RAID 1 (Protected)					

4. Select the RAID 1 (Protected) radio button as shown below and click the <Configure > button to continue.

Device detected: G-	RAID mini2/G-RAID3			
<u>4</u>				
Select RAID	level			
O RAID 0 (F	erformance)			
💽 RAID 1 (F	Select RAID level RAID 0 (Performance) RAID 1 (Protected)			
Configure	Exit			

5. The following window will appear. Click on the <Yes> button to continue.



6. The following window will appear. Click on the <Yes> button to continue.

	Warning:
G	Are you sure you want to ERASE all data and re- configure?

7. The following window will appear.



8. Your G-RAID mini₂ is now configured in RAID 1 mode.



9. The following window will appear. Click on the <Initialize> button to continue.



10. Refer to **Section 11** for information on initializing G-RAID mini₂ for use with Mac OS.

11. Formatting G-RAID mini₂ - Mac OS X

G-RAID mini₂ is initialized at the factory as a single Mac OS X volume in RAID 0 mode. Power on G-RAID mini₂, wait 10 seconds, then power on your Mac. G-RAID mini₂ will mount on the desktop as shown below.



If it becomes necessary to re-initialize G-RAID min_2 for Mac OS X, follow the instructions below.

1. Open the Apple *Disk Utility*. The Apple *Disk Utility* is in the **Utilities Folder** located in the **Applications Folder** on the Macintosh HD. Select G-RAID mini₂ by clicking on the entry in the left-hand column as shown below. Information about G-RAID mini₂ will be displayed at the bottom.



3. Select the Partition tab to view the partition options as shown below.

📄 232.9 GB HDS722525VL 🎒 Tiger		Volume Scheme:	Erase Partitio	formation
A65.8 GB G-Tech G-RAID		Current	Name:	
			Format:	Mac OS Extended (Journaled)
			Size:	
				Locked for editing
			Install №	Mac OS 9 Disk Drivers
	-		To create a	a volume that can serve as a Mac OS
			start up dis	sk, select Mac OS 9 Drivers installed
			Select the o volume sch the scheme and size. C	disk you want to partition and choo seme. Click each volume represente e and specify a volume name, forma lick Partition.
		Split Delete	Options.) (Revert) (Partitic

4. Set the **Volume Scheme:** to **1 Partition**. Enter a **Volume Name** under Volume Information (in this example "G-RAID mini₂") and set **Format** to **Mac OS Extended** as shown below.



Note: Alternatively, G-RAID mini can be set up in multiple volumes by selecting the desired number of partitions from the Volume Scheme pull-down menu.

5. Click on the <Partition> button. The dialog box shown below will appear. Click on the <Partition> button to continue.



6. When partitioning is complete, G-RAID mini $_2$ will be displayed in the left-hand panel as shown below.



7. Exit the Apple Disk Utility.

8. G-RAID mini $_2$ will be displayed on the desktop as shown below.



G-RAID mini₂ is now set up for use!!

12. Formatting G-RAID mini₂ - Windows

Follow the instructions below to format G-RAID mini₂ for use under Windows.

NOTE: G-RAID mini ships from the factory in RAID 0 mode. If you are running Windows and wish to set up G-RAID mini in fail-safe RAID 1 mode, please refer to section 12 of this guide prior to formatting the unit.

1. Power on G-RAID mini $_2$, wait 10 seconds, then power on your computer.

2. Open the **Disk Management** utility by rightclicking on the My Computer icon on the desktop and selecting "**Manage**" from the drop down menu as shown below.

Open	
Explore	
Search	
Manage	<u> </u>
Map Network Drive	8
Disconnect Network [Drive
Send To	
Cut	
Сору	
Create Shortcut	
Delete	
Rename	
Properties	

3. The *Computer Management* console will appear as shown below. Click on "**Disk Management**" in the left-hand panel. G-RAID mini₂ is identified as Disk 1 in this example.



Right click on **Disk 1** and select **Initialize Disk** from the pull-down menu as shown. The window shown below will appear.

4. Click on the <OK> button to continue.

? 🛛
alize.

5. The following window will appear. G-RAID mini (Disk 1) is now identified as Basic and Online.

File Action View Window H	Help					_ 2	×
⊨ → 🗈 🖪 😫 🗳 📽 🗄	3						
Computer Management (Local)	Volume Layout	Type F	File System	Status		Capacity	F
E 🎉 System Tools	Partition	Basic F	FAT	Healthy (EISA	Configuration)	47 MB	4
🖻 🔟 Event Viewer	Partition	Basic F	FAT32	Healthy (Unkno	own Partition)	3.65 GB	4
Shared Folders Coal Users and Groups Goal Users and Groups Goal Users and Groups Goal Users and Groups Coal Users	(C:) Partition	Basic M	NTFS	Healthy (Syste	em)	52.17 GB	2
Device Manager Storage Removable Storage Disk Defragmenter Disk Management Services and Applications	<						>
Bevice Manager Sorage	CDisk 0 Basic 55.88 GB	47 MB	(C:)	NTES	3 66 CR EAT33		> ^
Bovice Manager Sorage	Capital Capita	47 MB Health	(C:) 52.17 GB Healthy (:	NTF5 System)	3.66 GB FAT32 Healthy (Unkno	2	>

6. Right-click on the **Disk 1** "Unallocated" bar entry and select **New Partition...** from the pull-down menu as shown below.

🖳 Computer Management					×
📕 File Action View Window H	elp			_8	×
← → 🗈 🔟 😫 🐼 🕷	1				
Computer Management (Local)	Volume Layout	Type File System	Status	Capacity	Fr
System Tools	Partition	Basic FAT	Healthy (EISA Configuration)	47 MB	40
Event Viewer Shared Folders	Partition	Basic FAT32	Healthy (Unknown Partition)	3.65 GB	4:
E Cocal Users and Groups	(C:) Partition	Basic NTF5	Healthy (System)	52.17 GB	2
🗉 \overline 🐺 Performance Logs and Alerts					
Device Manager					
- 🔤 Storage					
Disk Defragmenter					
🚽 🗃 Disk Management	<u>×</u>				-
± Services and Applications	@Disk 0				^
	Basic	(C:)			
	Online	Health Healthy (System) Healthy (Unkn	2 OW	
		2			
	Basic	27/////////////////////////////////////		777777	
	232.88 GB Online	232.88 GB Unallocated	New Partition		*
			he he		
< >	Unallocated	Primary partition	Properties		

7. The window shown below will appear. Click on the <Next> button to continue.



8. The following window will appear. Click on the <Next> button to continue.



9. The window shown below will appear. Click on the <Next> button to continue. This will create

one large volume using all of the available space on G-RAID mini $_2$.

Specify Partition Size Choose a partition size that is between th	e maximum and minimum sizes.
Maxium disk space in megabytes (MB):	238473
Minimum disk space in MB:	8
Partition size in MB:	238473
	(Back Next) Cancel

Note: Multiple partitions can be created on G-RAID mini. Consult your Windows documentation for instructions on setting up multiple partitions.

10. Windows will automatically assign a drive letter, in this example "D". Accept this assignment and click on the <Next> button to continue.

ssign Urive Letter or Path For easier access, you can assign a drive lette	r or drive path to your partition.
Assign the following drive letter: Mount in the following empty NTFS folder: Do not assign a drive letter or drive path	D V
	< Back Next > Cancel

11. Enter a **Volume Label:** (in this example, G-RAID mini₂), check the **Perform a quick format** box and click on the <Next> button to continue.

u must format it first.		
at this partition, and if	so, what settings you v	vant to use.
e following settings:		
NTFS	~	
Default	~	
G-RAID		
at m	nini	
compression		
		<u> </u>
	at this partition, and if e following settings: NTFS Default G-RAID at r compression	at this partition, and if so, what settings you v a following settings: NTFS Default G-RAID at compression

12. The following window will appear. Click on the <Finish> button to continue.



13. Windows will format the volume and then display the following window. Disk 1 is now identified as G-RAID mini (E:). Exit the *Computer Management* console



14. G-RAID mini will now be displayed as an available hard disk drive under *My Computer* as shown below.



G-RAID mini is now set up for use!!

13. RAID 1 Mode – Windows

A Windows utility is provided with G-RAID mini to select the RAID mode. Follow the directions below to configure G-RAID mini₂ in fail-safe RAID 1 (mirroring) mode.

NOTE: G-RAID mini₂ ships from the factory in RAID 0 mode.



WARNING: Changing the RAID level will erase any data stored on G-RAID mini₂.

1. Launch the G-Tech Configurator utility located on the CD that ships with the unit. The following window will appear.



2. Click on the <Continue> button. The following window will appear.



NOTE: The search process may take some time...

3. Once the utility finds your G-RAID mini₂, the following window will appear.

)evice detected:	G-RAID mini2/G-RAID3
Choose n	ew RAID level
RAID 0 (Performance)
ORAID 1 (Protected)
(Current RA	AID level is selected)
Configure	Exit

4. Select the RAID 1 (Protected) raido button as shown below and click the <Configure> button to continue.

evice detected:	G-RAID mini2/G-RAID3
Choose n	ew RAID level
ORAID 0 (Performance)
• RAID 1 (Protected)
(Current RA	ID level is selected)
Copfigure	Fyit

5. The following window will appear. Click on the <Yes> button to continue.

WARNING!!!	
2	Are you sure you want to ERASE all data and re-configure?
	Yes No

6. The following window will appear. Click on the <Yes> button to continue.

WARNING!!!	
⚠	This will ERASE all the data on your G-Tech storage system
	OK Cancel

7. The following window will appear.



8. Your G-RAID mini is now configured in RAID 1 mode.



9. The following window will appear. Click on the <Exit> button to exit the utility.



10. Refer to **Section 12** for information on formatting G-RAID $mini_2$ for use with Windows.

14. Cross-Platform Use

To setup your G-RAID mini₂ for use on both Windows and Macintosh systems, use the Apple Disk utility and format G-RAID mini₂ FAT32.

NOTE: Prior to setting up G-RAID $mini_2$ for Cross-Platform use, make sure that the unit is configured in the desired RAID mode.

- 1. Open the Apple *Disk Utility.* (The Apple *Disk Utility* is in the **Utilities Folder** located in the **Applications Folder** on your system drive). A window like the one below will appear.
- Select the G-RAID mini₂ from the left-hand column, then select the "Erase" button at the top as shown. Select MS-DOS File System from the drop down menu and Enter "G-RAID mini₂" in the Name field.



3. Click on the erase button and the following will appear.



4. Click "Erase" and your drive will be formatted to its full capacity as FAT32. With this format, you will be able to READ/WRITE on both windows (2000/XP) and MAC OS machines.

NOTE: You could format your drive on a Windows machine FAT32, however Windows limits FAT32 partitions to 32GB in size.



WARNING:

THIS WILL ERASE ALL DATA ON YOUR DRIVE.

NOTE: The 'MS-DOS File System' cannot write files over 4 GB. If you are working with files over 4 GB, you may want to choose a software option like MacDrive. MacDrive is Windows software that enables the Windows OS to mount MAC formatted drives. (www.macdrive.com)

15. TECHNICAL SUPPORT

If you encounter any difficulties while installing G-RAID mini₂, please contact G-Tech Technical Support via one of the following ways:

Telephone: (310) 449-4599 Fax: (310) 449-4670 E-mail: <u>support@g-technology.com</u> Internet: <u>www.g-technology.com</u>

When contacting Technical Support, make sure to be in front of your computer and have the following information readily available:

- Your G-RAID mini₂ serial number (on bottom of unit)
- Operating system and version
- Computer brand and model
- Amount of memory installed
- Other devices attached to your computer

Thank you for purchasing G-RAID mini₂. If you have any comments or questions about this manual or the product, please call (310) 449-4599, or send an email to <u>info@g-technology.com</u>.

16. LIMITED WARRANTY

G-Technology Inc. (G-Tech) warrants your product against any defect in material and workmanship, under normal use, for the designated warranty period. If the product should become defective within the warranty period, G-Tech, will at its discretion, repair or replace the product. Repair or replacement parts or products will be furnished on an exchange basis and will be either new or reconditioned. All replaced parts or products shall become the property of G-Tech. This warranty shall not apply if the product has been damaged by accident, misuse, abuse or as a result of unauthorized service or parts. Warranty service is available to the purchaser by obtaining a Return Material Authorization number (RMA) and by delivering the product during the warranty period to an authorized G-Tech service facility or to G-Tech. The purchaser shall bear all shipping, packing and insurance costs and all other costs, excluding parts and labor, necessary to effectuate repair, replacement or refund under this warranty. All returned product must be shipped to G-Tech in the original shipping container.

For more information on how to obtain warranty service, an RMA number or to acquire shipping materials, contact G-Tech at (310) 449-4599 or <u>support@g-technology.com</u>.

IN THE EVENT A PRODUCT BECOMES DEFECTIVE DURING THE WARRANTY PERIOD, THE PURCHASER'S EXCLUSIVE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. INCIDENTAL OR CONSEQUENTAL DAMAGES, INCLUDING WITHOUT LIMITATION LOSS OF DATA, ARISING FROM BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ARE NOT THE RESPONSIBILITY OF G-TECH AND, TO THE EXTENT PERMITTED BY LAW, ARE HEREBY EXCLUDED BOTH FOR PROPERTY DAMAGE, AND TO THE EXTENT NOT UNCONSCIONABLE, FOR PERSONAL INJURY DAMAGE.